

SHOUT 2D – Heat Press

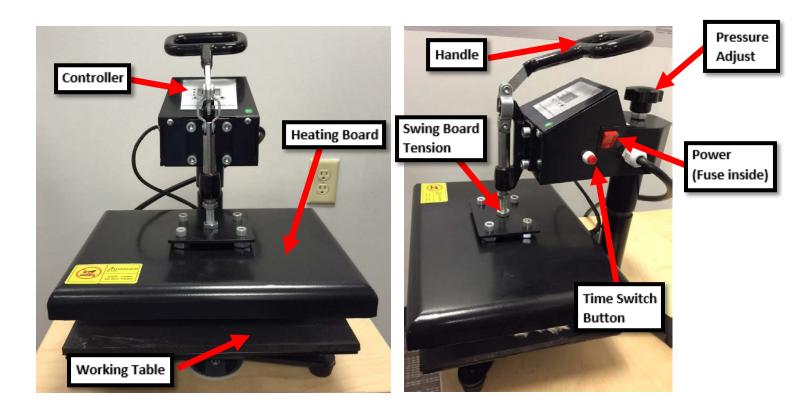

Set Heat Press from Celsius to Fahrenheit (if the second indicator light is Green, your Heat Press is set to Celcius)

- Press and <u>hold down</u> on the SET button for 10 seconds
 - You will briefly see P-3 appear on the Screen, contiunue to hold down until you see the **'C'** for Celsius appear. (See below image)

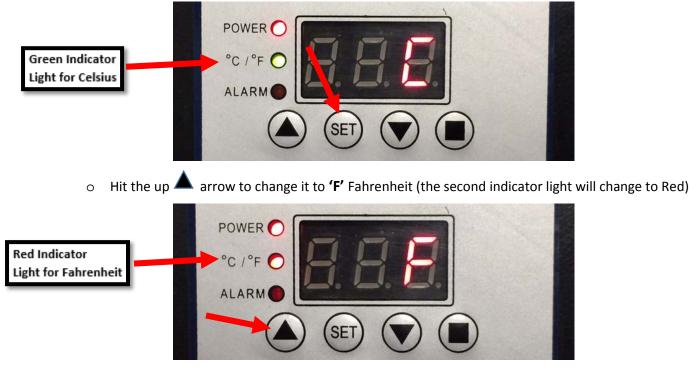

 Once completed Press and <u>hold down</u> on the SET button again for 10 seconds. This will return you back to the main screen.

Set Temperature & Time Clock to Heat Press

- Hit the **SET** button once
 - P-1 will appear on the screen



- \circ Begin hitting the up \blacktriangle arrow to select your desired temperature
 - Set Heat Press Temperature to 375°F



- Hit the **SET** button again (for the second time)
 - **P-2** will appear on the screen




- \circ Begin hitting the up \blacktriangle arrow to select your desired timer (in seconds)
 - Set Heat Press Timer to 50 seconds (an additional 10 seconds may need to be added)



• Hit the **SET** button again (for the third time). This will return you back to the main screen.

Using the Heat Press

- First make sure the Heat Press has reached the Temperature you set it for (375°F)
- Once the Plate and Paper are set into the Heat Press close the press with the handle
- Then press the red button (Time Switch Button) located on the right side of the Heat Press
 - \circ $\;$ This will then begin the count down until the plate is ready to be removed
 - The Heat Press will sound (beep) after the countdown (from 30 seconds) is complete
 - Once completed remove the printing materials (Plate and Paper)
 - Hit the red button (Time Switch Button) again to stop the beeping

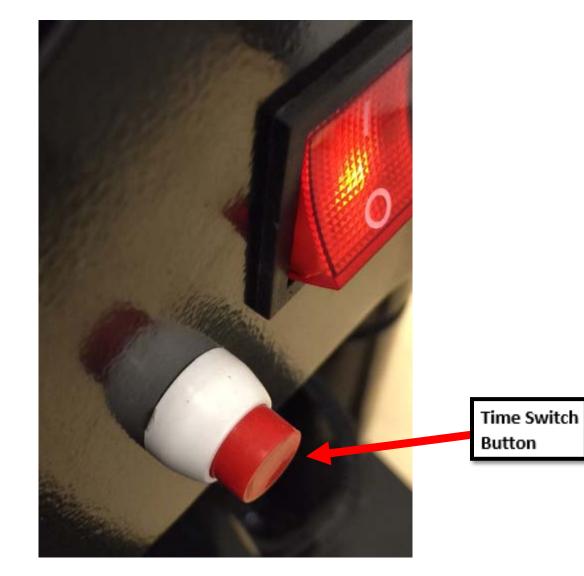

Default Settings P-4 through P-7

- Press and <u>hold down</u> on the SET button for 10 seconds
 - o You will briefly see P-3 appear on the Screen
 - o Hit SET again to view the next setting, Below are the factory settings for each
 - **P-4** = 0
 - **P-5** = 3
 - **P-6** = 10
 - **P-7** = 8